
THE DOWNTIME ELIMINATOR: WET TAP VALVE ASSEMBLIES

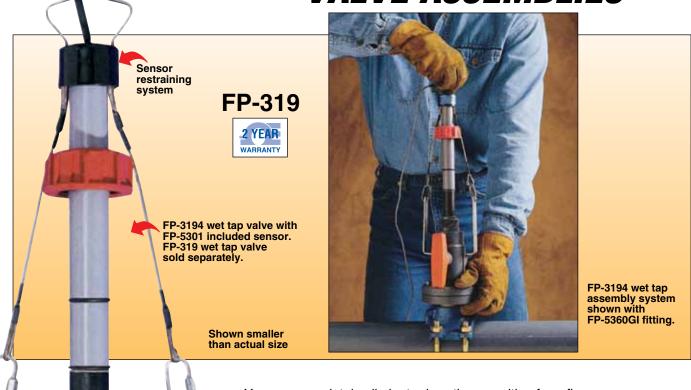

You can completely eliminate downtime resulting from flow sensor maintenance with the simple addition of TRODEX's FP-319 Wet Tap Valve Assembly. The FP-319 serves as a unique interface between your TRODEX sensor and matched sensor installation fitting. It provides you with a safe and fast method of removing a specially extended sensor from your pipe, under normal operating pressures. Additionally, the molded PVC design of the Wet Tap Assembly makes it resistant to corrosion and chemical attack by acids, alkalies, salt solutions, and many other harsh chemicals. When ordering the Wet Tap Assembly, you can choose from two TRODEX flow sensor models. The Paddlewheel Flow Sensor features a patented "open-cell" rotor, resulting in ±1% linearity over the full flow range.

SPECIFICATIONS

Pressure Rating: 100 psig maximum @ 20°C (68°F) Temperature Rating: 60°C (140°F) @ 25 psig

Recommended Installation/Removal Pressure: 25 psig @ 22°C (72°F) maximum

Weight: 1.8 kg (4 lb)

To Order Included **Assembly** Shaft Pipe Housing Rotor Model No. Sensor Material Material **Material** Material Size (in) FP-319 Wet-tap valve assembly None Black PVDF 0.5 to 4 FP-3193 FP-5300 **PVC** Polypropylene Titanium FP-3194 FP-5301 **PVC** Polypropylene Titanium Black PVDF 5 to 8 FP-3195 FP-5302 **PVC** Polypropylene Black PVDF 10 to 36 Titanium FP-3196 FP-5600 **PVC** Polypropylene Titanium Black PVDF 0.5 to 4

Comes complete with operator's manual. FP-5300 sensor and FP-5600 sensor are physically interchangeable. They are not electrically interchangeable. The FP-5300 sensor is self-powered and can be used with all **TRODEX**® offered paddlewheels. The minimum flow rate is 1 FPS. The FP-5600 is a low flow Hall Effect sensor paddlewheel. The FP-5600 sensor has a minimum flow rate of 0.3 FPS and requires DC voltage.

Ordering Examples: FP-319, wet-tap valve assembly.

FP-3194, 5 to 8" pipes wet tap assembly includes wet tap FP-5301, sensor.

The FP-3194 wet tap valve assembly does not include pipe installation fitting. Visit us online for details.

Ratings

hold for

any sensor

wet tap